AXIS P32 and AXIS M32 Dome Camera Series

Repaint the product

Repaint the product

Preparations

- If applicable, disassemble the device according to the instructions in this document.
- · Clean all parts that will be repainted thoroughly to remove grease, dust, or oil.
- To ensure reassembly and functionality of the product, mask any openings (for example for screws, LED indicators, or microphones) before you paint.
- To avoid unwanted reflections, mask the inside of the weathershield before you paint.

Pretreatment of parts


• Use a primer to pretreat the parts before you paint.

The material used in the product is Panlite PC LN-3520ZH.

AXIS P32 and AXIS M32 Dome Camera Series

Repaint the product

Disassembly

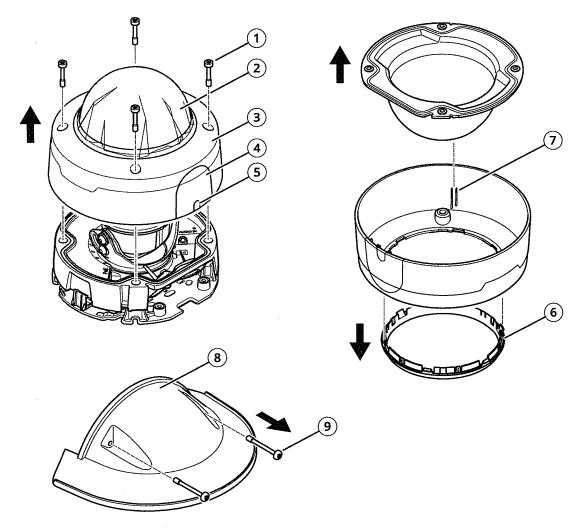

- 1 Screws (4x, TR20)
- 2 Dome
- 3 Dome cover
- 4 Conduit cover
- 5 Cable cover
- 6 Anti-reflection ring
- 7 Snap fits holding the dome (2x)
- 8 Weathershield
- 9 Screws (2x, TR20)
- 1. Remove the weathershield, if it's already attached to the dome cover.
- 2. Remove the dome cover.
- 3. Remove the cable cover or conduit cover if you are not going to use it.


AXIS P32 and AXIS M32 Dome Camera Series

Repaint the product


- 4. Remove the dome from the dome cover by releasing it from the snap fits.
- 5. Remove the anti-reflection ring. Don't paint it.

Repainting

1. Make sure all necessary preparations of the weathershield and dome cover have been made, see Preparations on page 3.

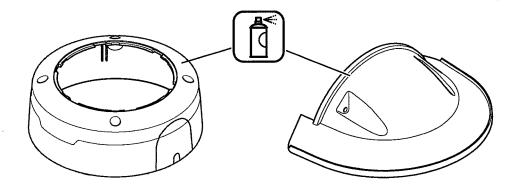

2. Apply a thin and even layer of spray paint according to the instructions of the paint manufacturer.

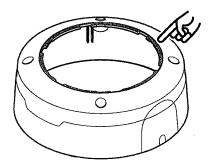

Important

Avoid paint build-up in the area marked with red color.

- 3. Let the paint dry.
- 4. To get a better coverage and clearer color, apply a second layer of spray paint.
- 5. When the paint is dry, remove the masking and reassemble the product.

Reassembly

- 1. Reattach the anti-reflection ring and the dome to the dome cover.
- 2. Reassemble the weathershield, dome cover and camera and tighten the screws (torque 1.0 Nm, 0.7 lb ft).