

DuMor, inc.	BENCH	DATE DRAWN : 03/22/94 DRAWN BY : AH DATE REV. : 10/26/11 REV. BY : ESS	rev. E	DRAWING NUMBER	51	SERIES	SHEET 1 OF 2
-------------	-------	---	-----------	-------------------	----	--------	-----------------

NOTES:

- 1.) DURING ASSEMBLY PROCEDURE; DO NOT COMPLETELY TIGHTEN HARDWARE.
- 2.) THE ACTUAL PARTS WILL NOT BE NUMBERED.
 NUMBERS ONLY APPLY TO DRAWING.
 3.) LIDON COMPLETION OF ASSEMBLY SOLIABE
- 3.) UPON COMPLETION OF ASSEMBLY SQUARE ALL COMPONENTS THEN TIGHTEN ALL HARDWARE.
- 4.) MOUNT AND ANCHOR AS SPECIFIED.

TOOLS REQ'D

3/4" WRENCH
9/16" WRENCH
DRILL BIT (REFER TO
CHART BELOW FOR SIZE)
1/2" MASONRY DRILL BIT
DRILL


PARTS LIST				
	ITEM	ITEM QTY PART NO		DESCRIPTION
	1	2	0-51-00-01/S-2	SUPPORT FOR SURFACE MT
	2	1 0-51-60-02		6' SEAT ASSEMBLY
	3	16	3/8" X 2" SS BTN SKT HD LAG	
4 16 1–22–024		1-22-024	3/8" SS FLAT WASHER	
KITS PROVIDED				

111011122					
ITEM	QTY	PART NO	DESCRIPTION		
5	1	K-BL0632-16	3/8" LAG HARDWARE KIT (16PC)		
6	1	K-ANC0860-4	1/2" X 3 3/4" SS ANCHOR KIT (4PC)		

LOCATE SEAT ON SUPPORTS, DRILL PILOT HOLES USING CHART.
ATTACH TWO SCREWS NEAREST SUPPORT POST FIRST.

(2)	ΔΤΤΔΩΗ	REMAINING	HARDWARE.
(~ /	ALIACII	NEMAINING	HANDWANE.

PILOT HOLE CHART				
WOOD SPECIES	PILOT HOLE DIA			
DOUG FIR	1/4"			
IPE	11/32"			

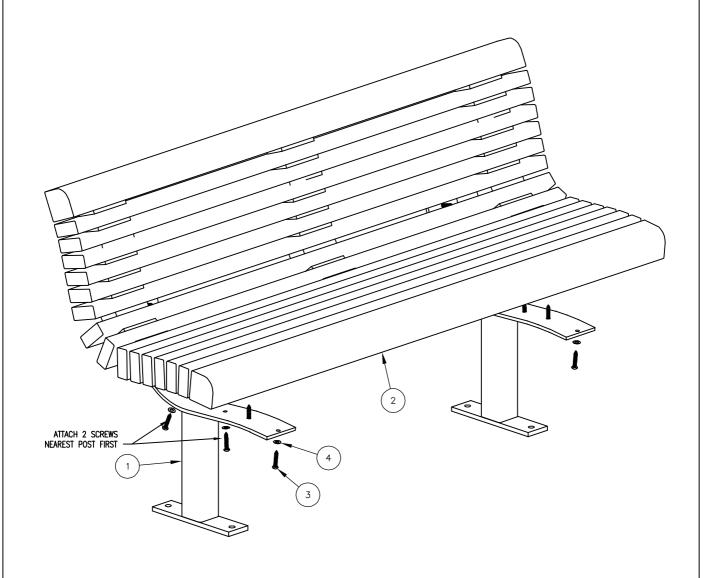

	******	4	
	~~~	_	·
DuMc	) r.	ir	$\cap \subset$ .

ASSEMBLY INSTRUCTIONS

DATE DRAWN: 03/22/94 DRAWN BY: AH DATE REV.: 12/15/08 REV. BY: ESS REV. DRAWING NUMBER Δ

51 SERIES

SHEET 2 OF 2