

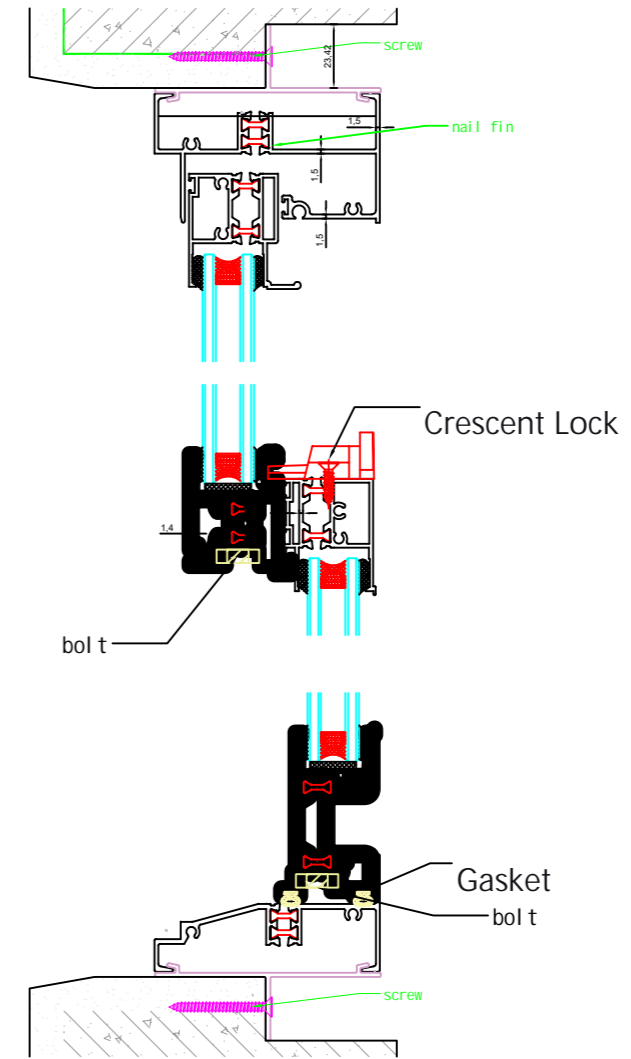
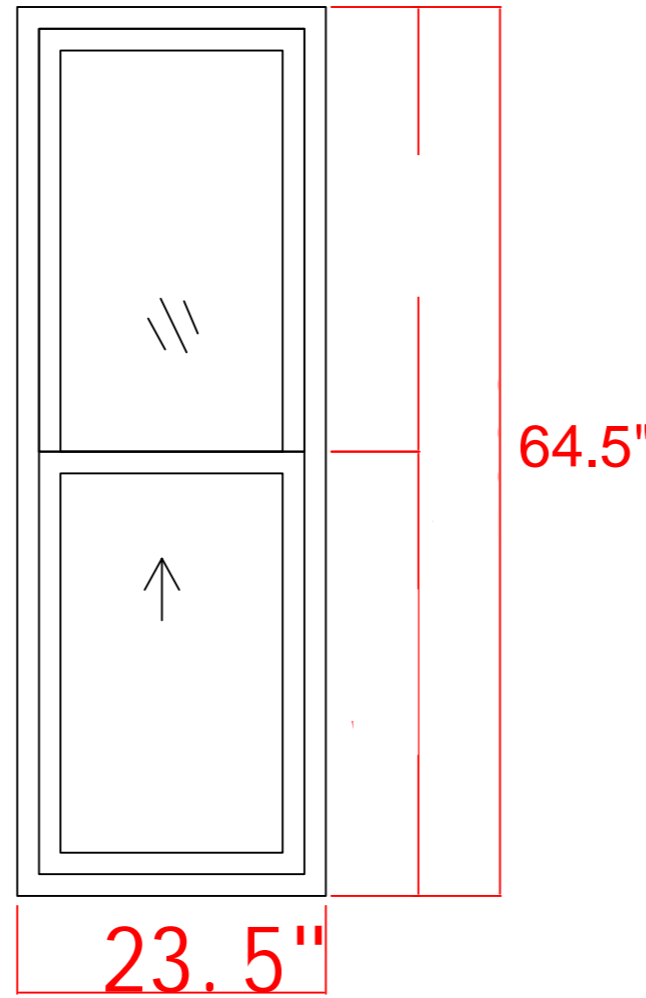


W1 83 Series single hunge window, Black powder coating. QTY: 127 Set

Screws must only be fastened above the balancer. During fastening, avoid letting debris fall into the balancer.




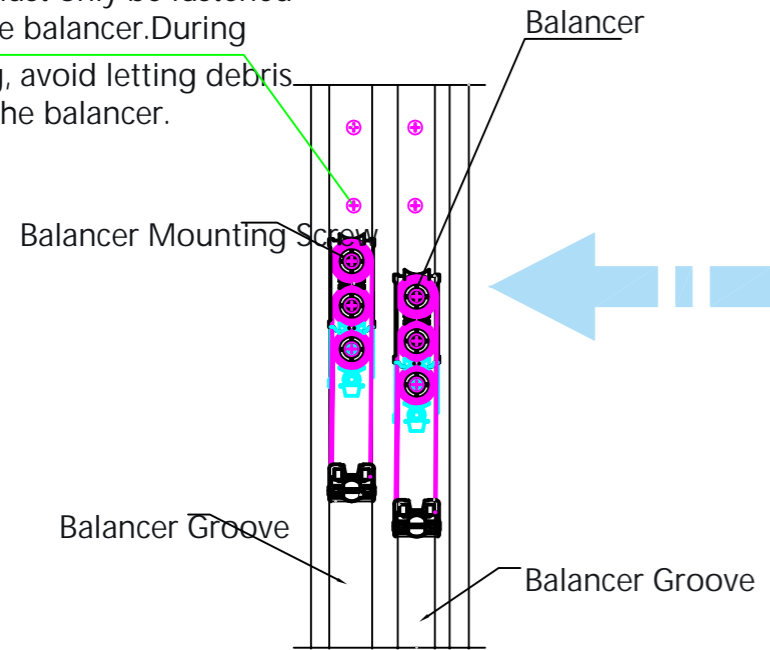


exterior

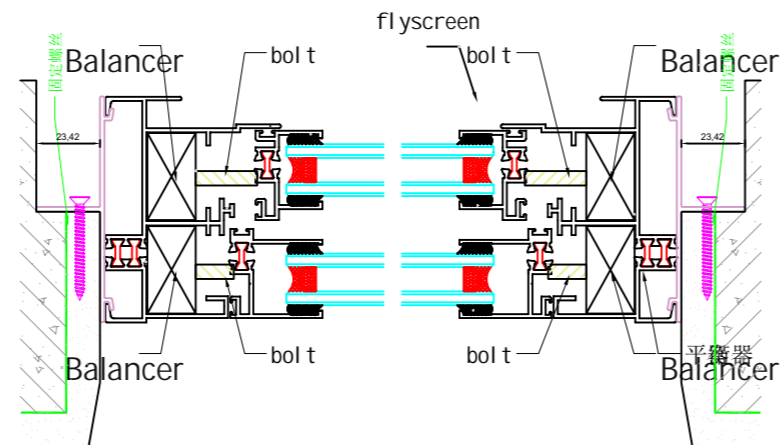





W2 83 Series single hunge window, Black powder coating. QTY: 127 Set

Screws must only be fastened above the balancer. During fastening, avoid letting debris fall into the balancer.

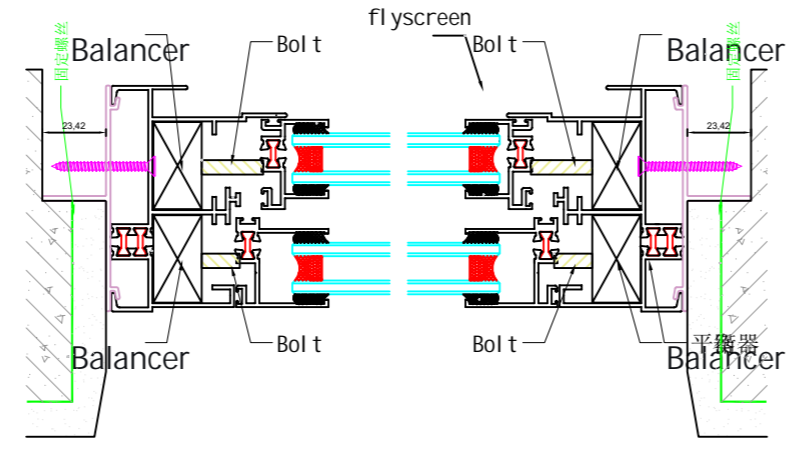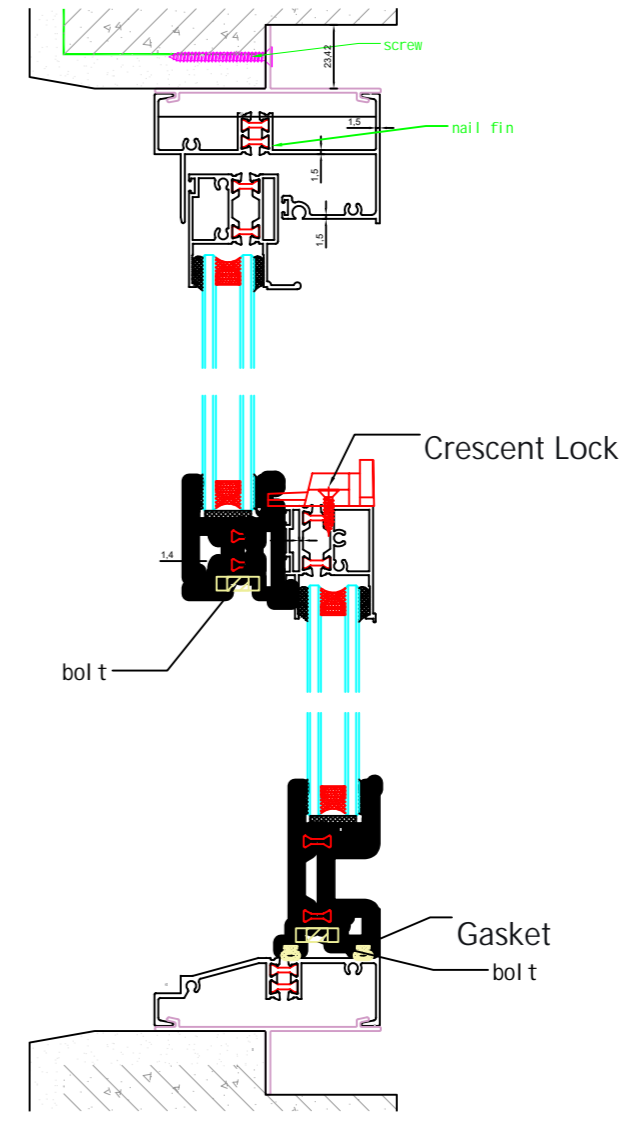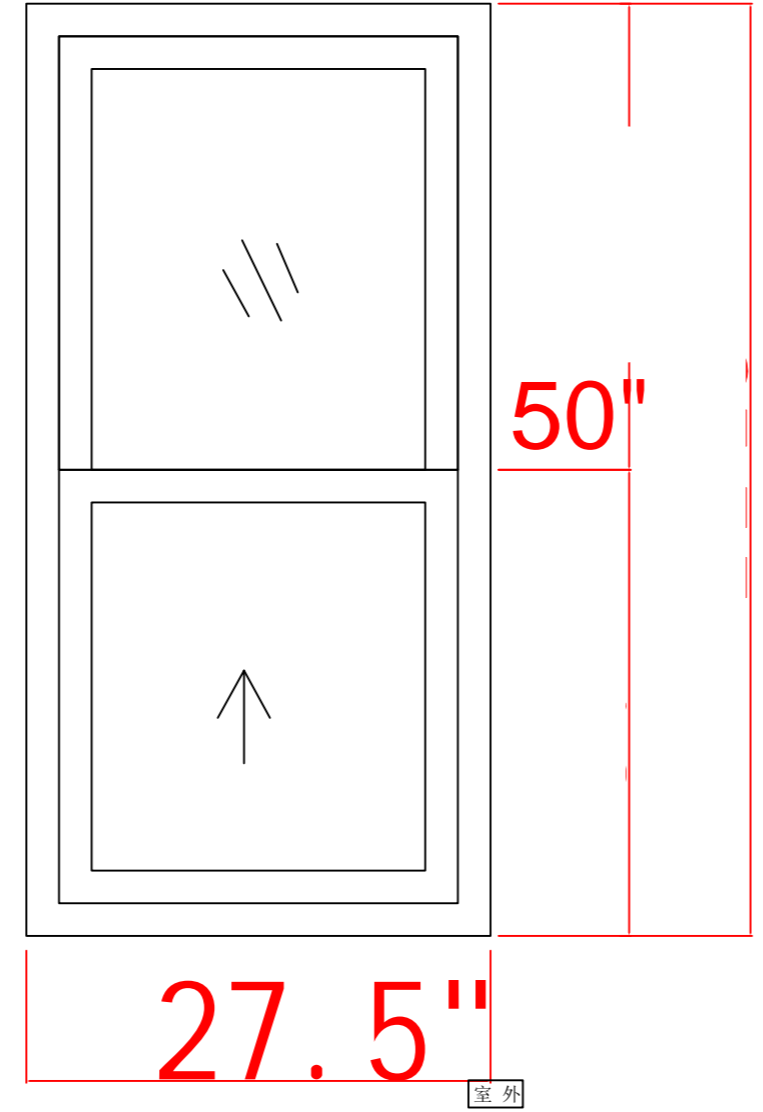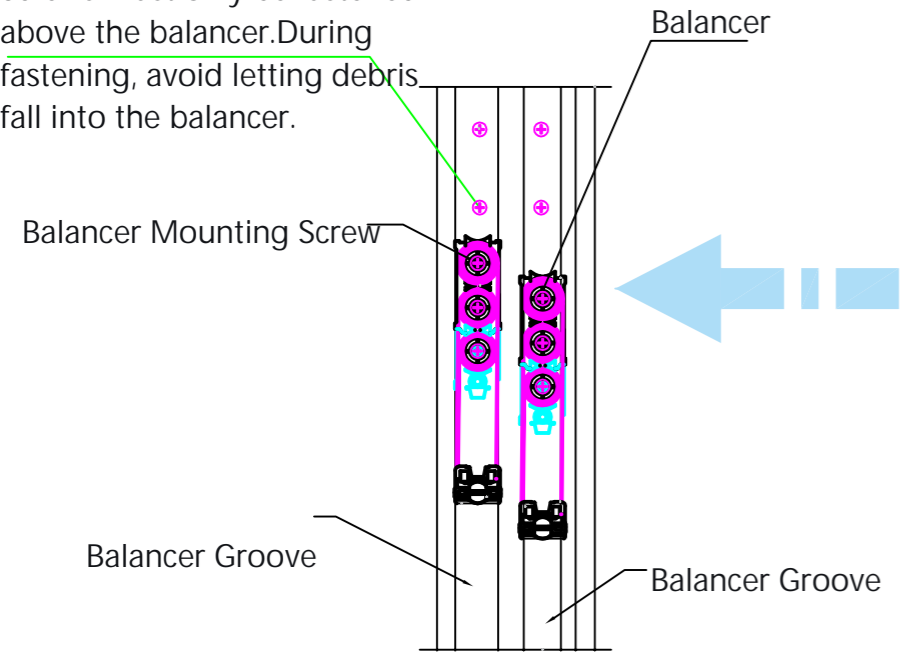



W3 83 Series single hunge window, Black powder coating. QTY: 4Set

Screws must only be fastened above the balancer. During fastening, avoid letting debris fall into the balancer.

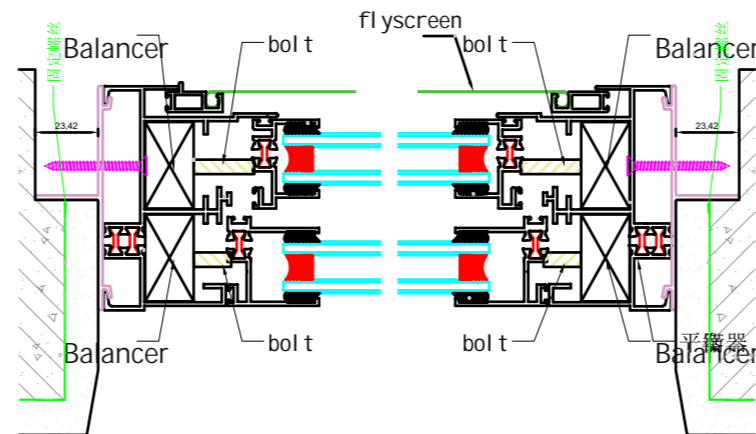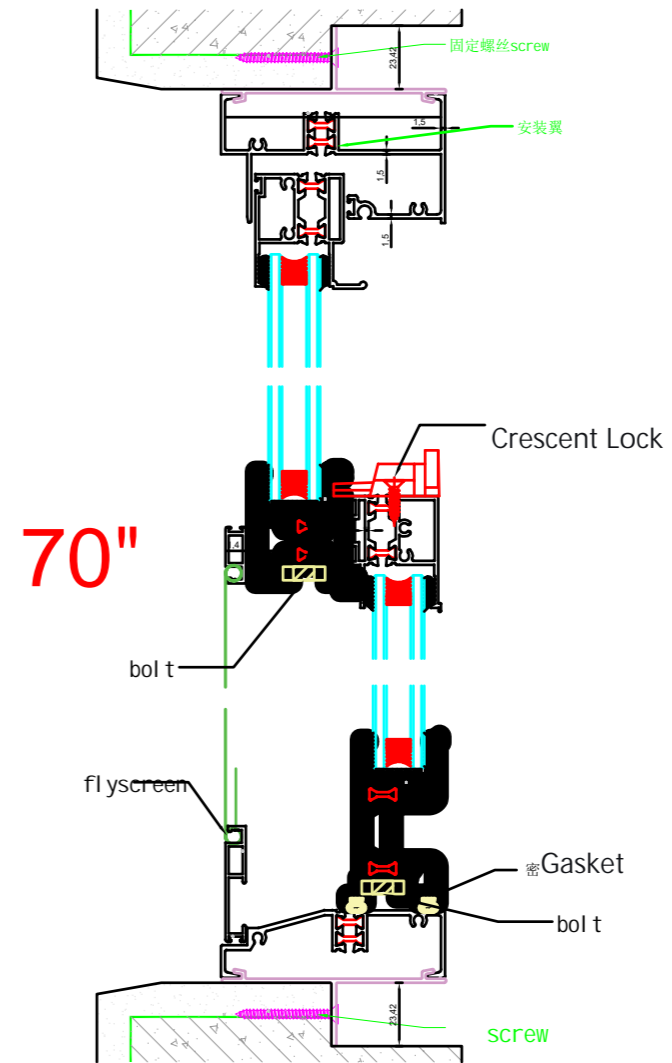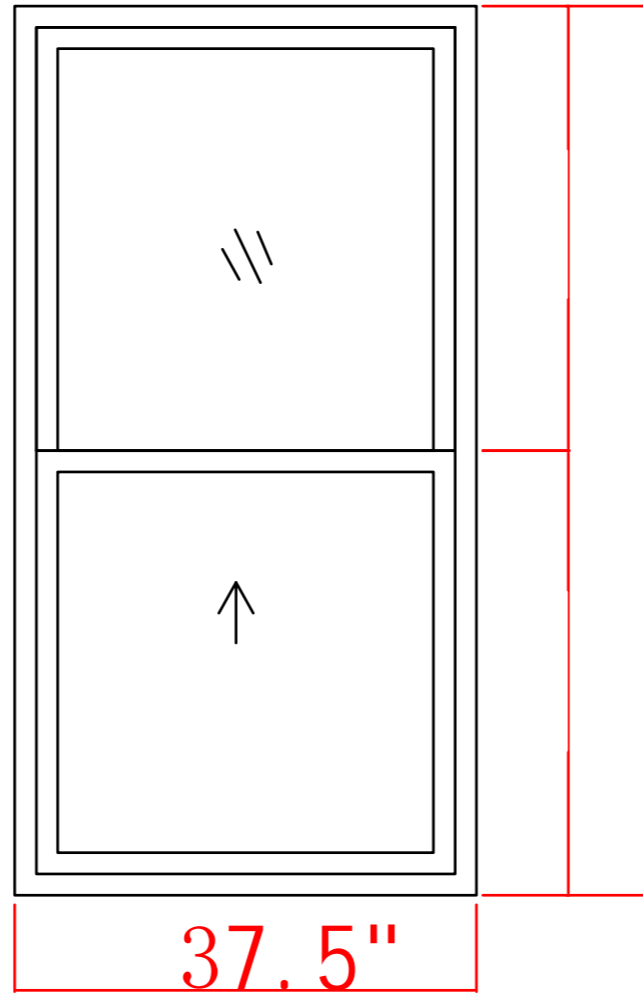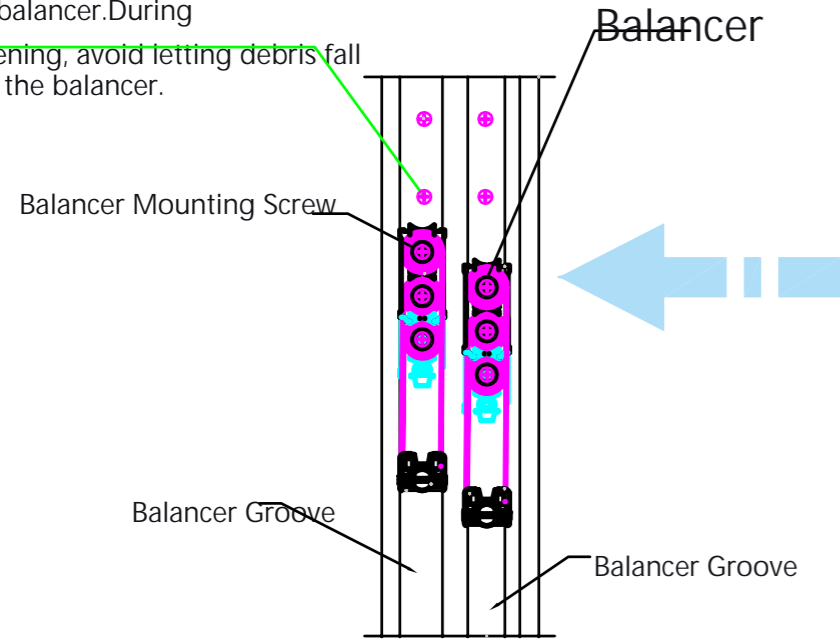



W3 E2 Series s Fixed window, Black powder coating. QTY: 3Set

have to make new; 5x arch:77.5 wide x 41.5 tall

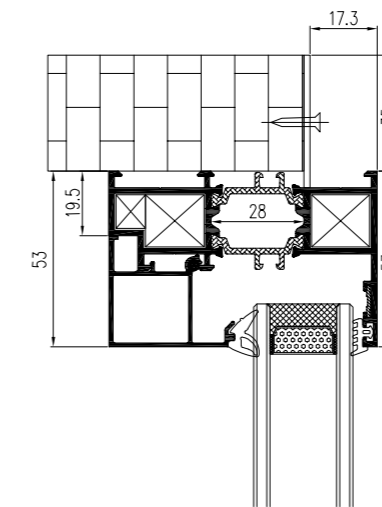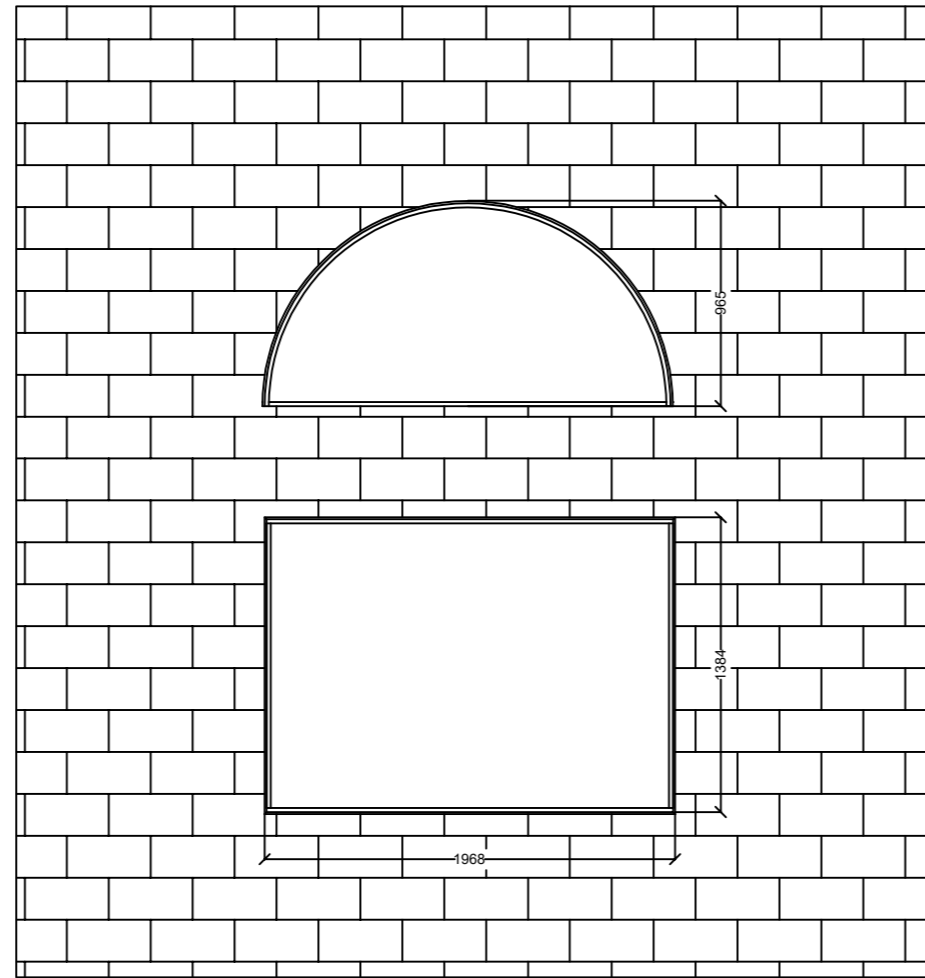


interior


exterior

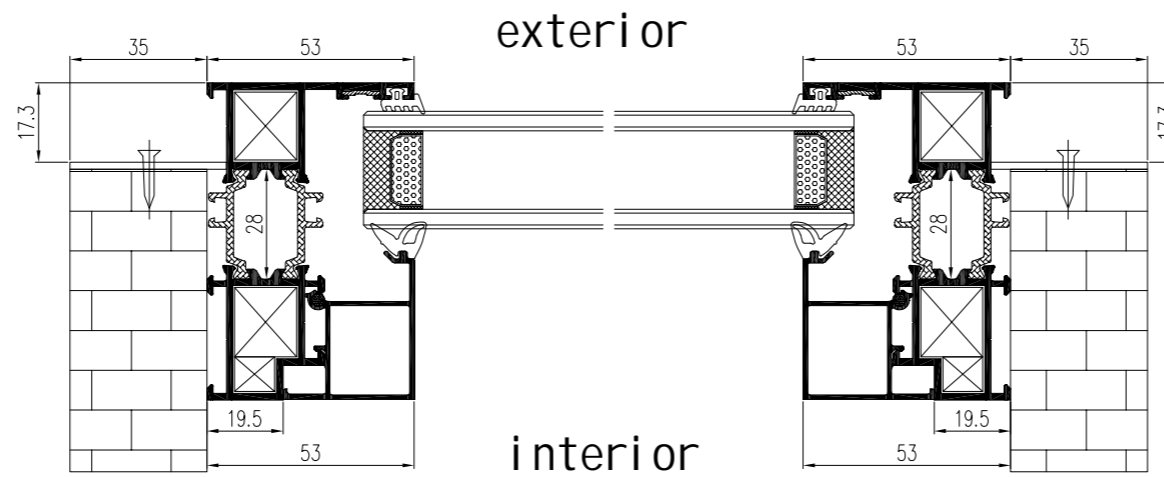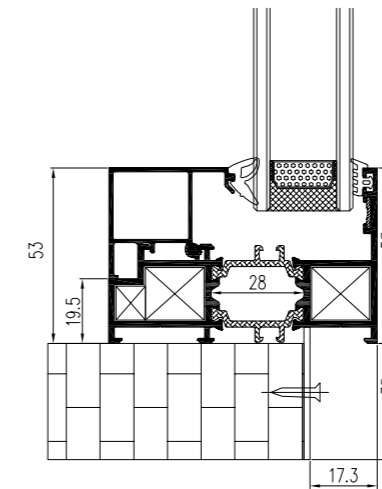

W6 E2 Series s Fixed window, Black powder coating. QTY: 3Set

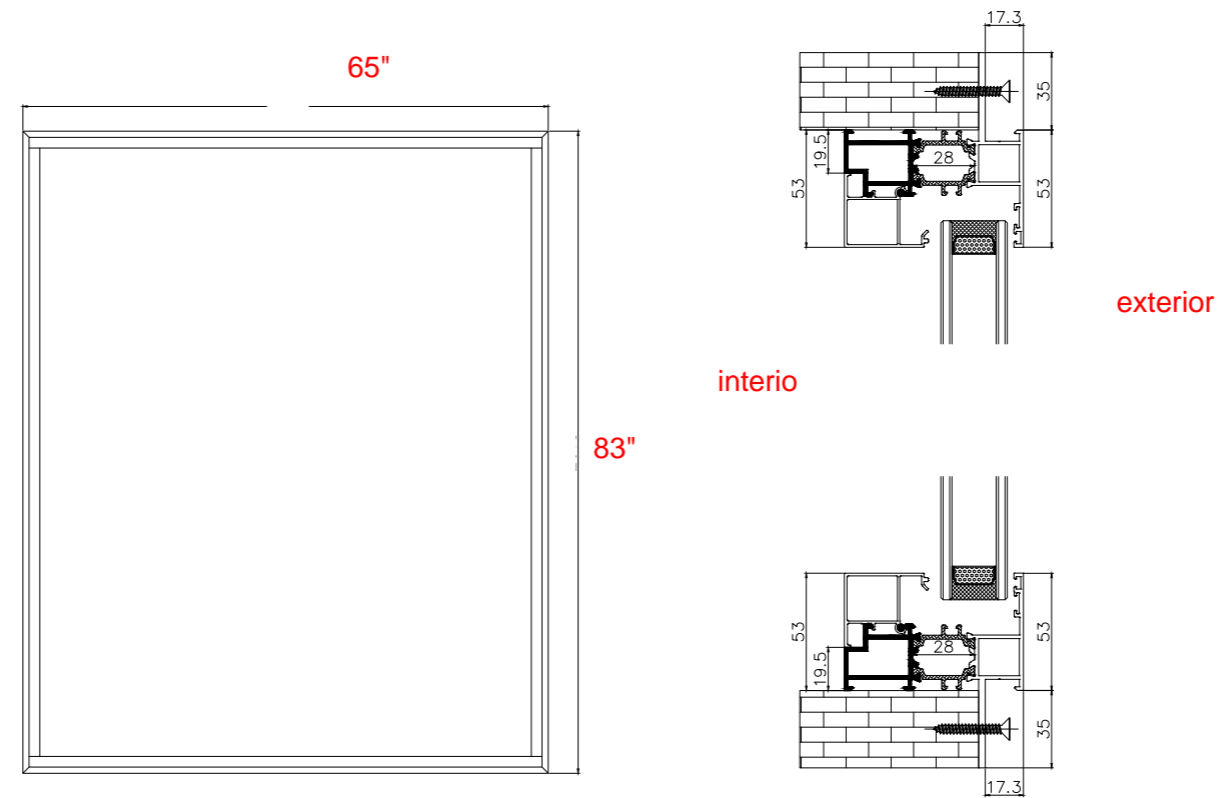

have to make new 3x 55.5 wide x 78.5 tall

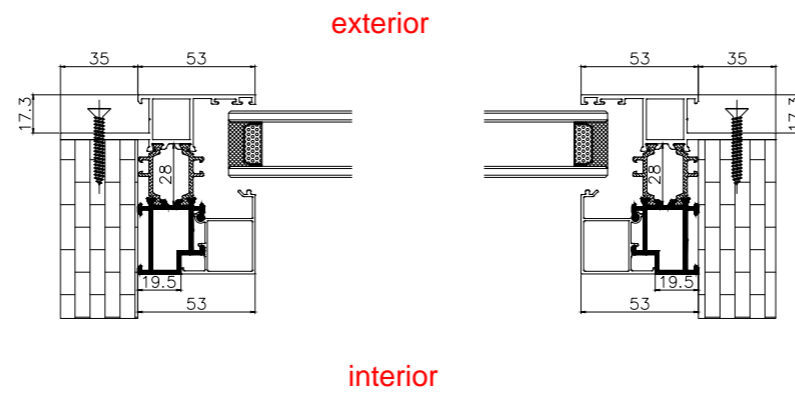

E2 SERIES FIXED WINDOW